


Magnetic Strip

DOOR CURTAIN

Installation Instructions



1. Clean door frame to remove any dirt or grease.

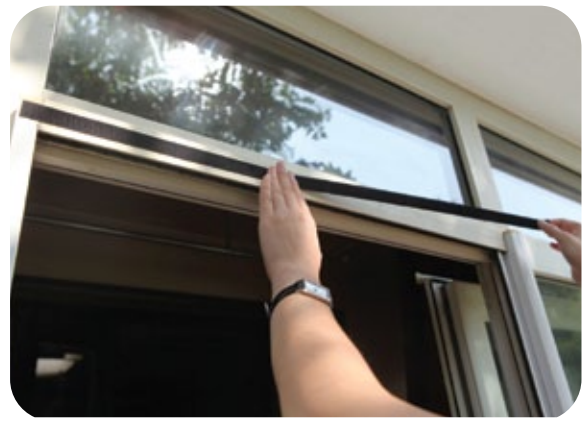

2. Carefully attach the velcro top strip horizontally.




3. Align and attach the left side panel to top strip.



4. Align and attach right side panel to top strip.



5. Remove velcro backing from door panels.

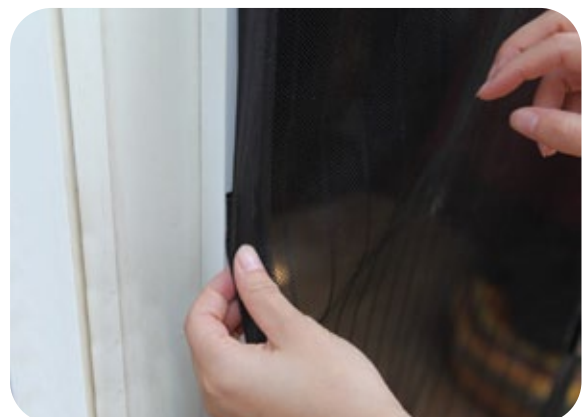

6. Fix sides to frame ensuring the centre strip magnet aligns.