


# LINK SCREEN

Modular Door - Installation Instructions

## FACE MOUNT


FITTED **OUTSIDE** DOOR FRAME

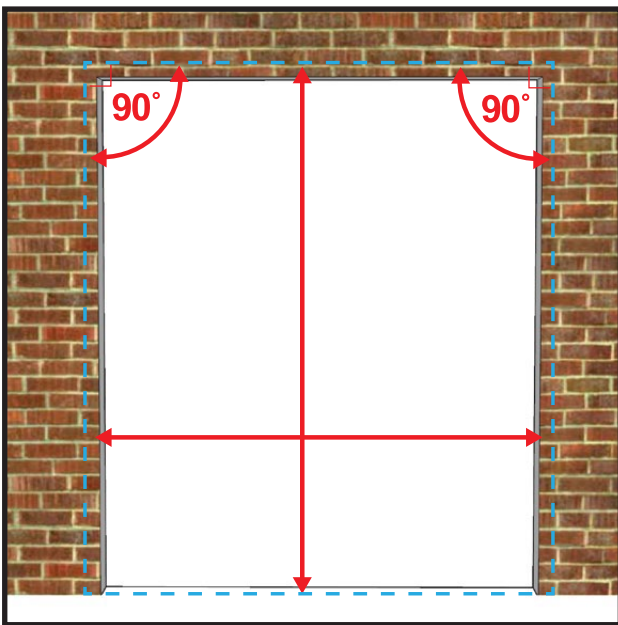

**STEP. 1.**

Measure width/height to ensure correct size requirements.

**DOOR MUST BE LEVEL & SQUARE**

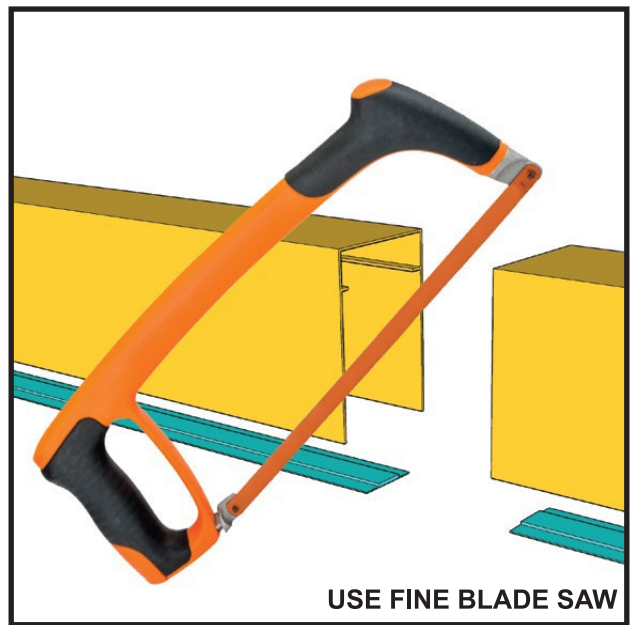


**USE FINE BLADE SAW**

**STEP. 2.**


Door width can be altered to suit opening, measure and trim Headrail and Bottom track as required.

**HEIGHT CANNOT BE ALTERED**

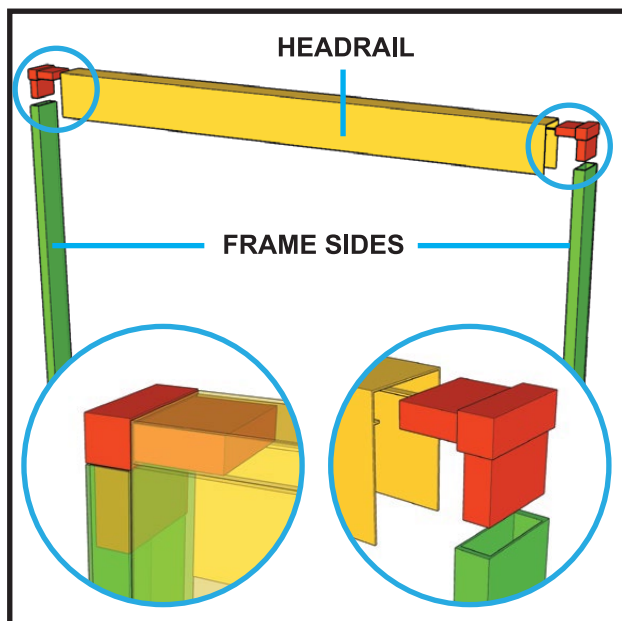

**STEP. 3.**


Construct door frame by connecting Headrail to frame sides using corner pieces provided.

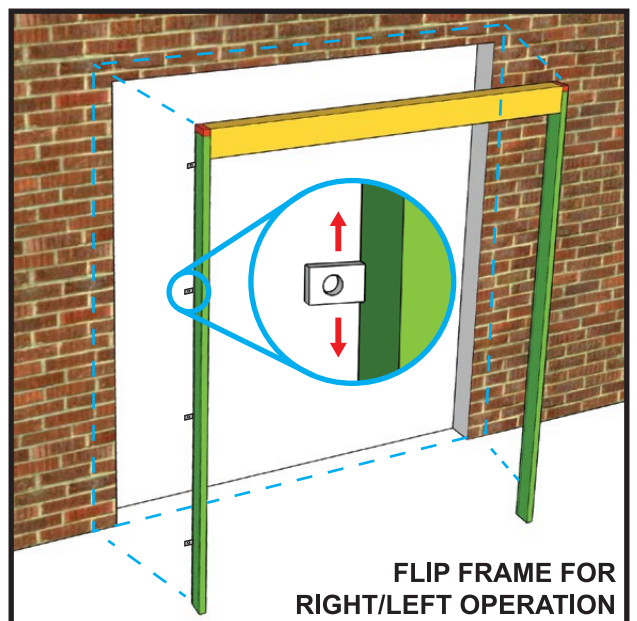


**FLIP FRAME FOR RIGHT/LEFT OPERATION**

**STEP. 4.**


Place face-mount brackets in desired locations and position constructed frame over door opening ensuring frame is square and level.

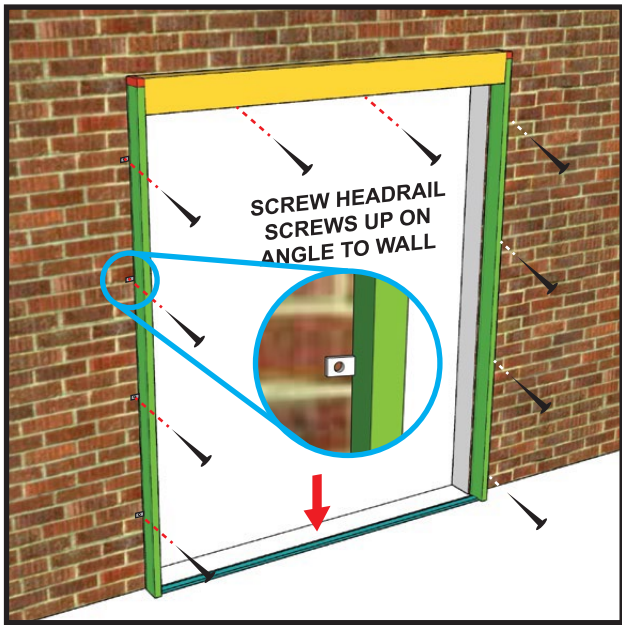


**STEP. 5.**  
Secure door over opening using screws provided.  
Clean base and apply bottom rail using tape provided.

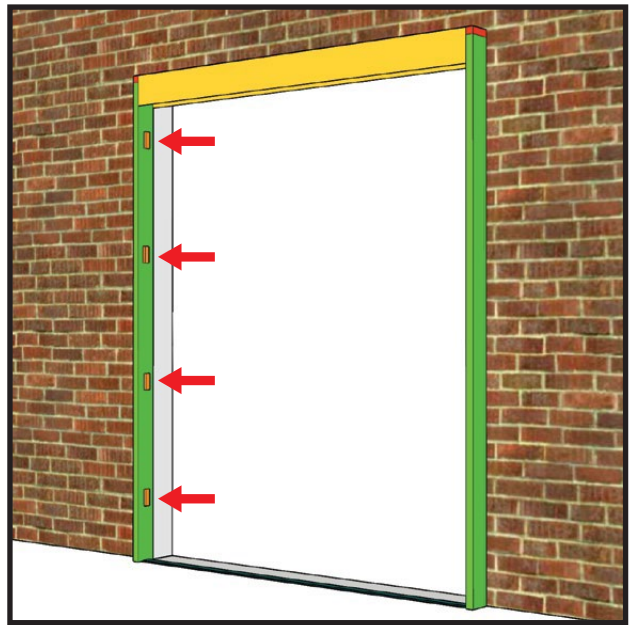


**STEP. 6.**  
Ensure connector clips are securely installed  
at even intervals for door to clip onto.

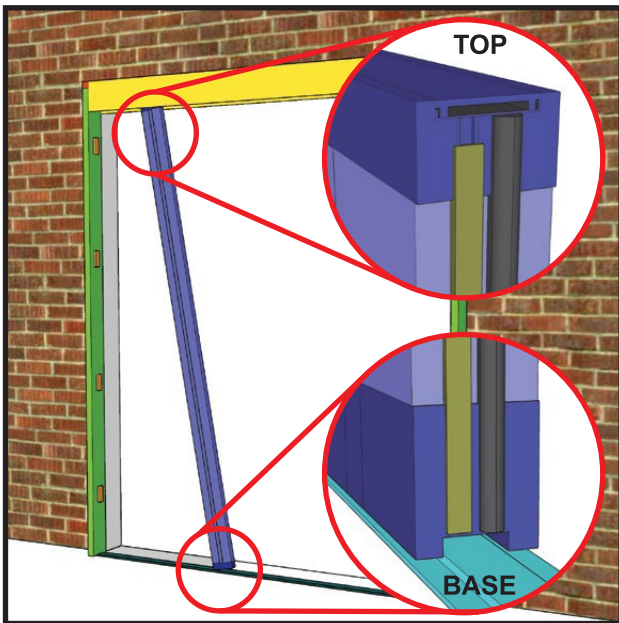

**STEP. 7.**  
To install door, angle door up/under the headrail and  
straighten against the side frame with connectors.  
Ensure base of door is sitting correctly on base rail.

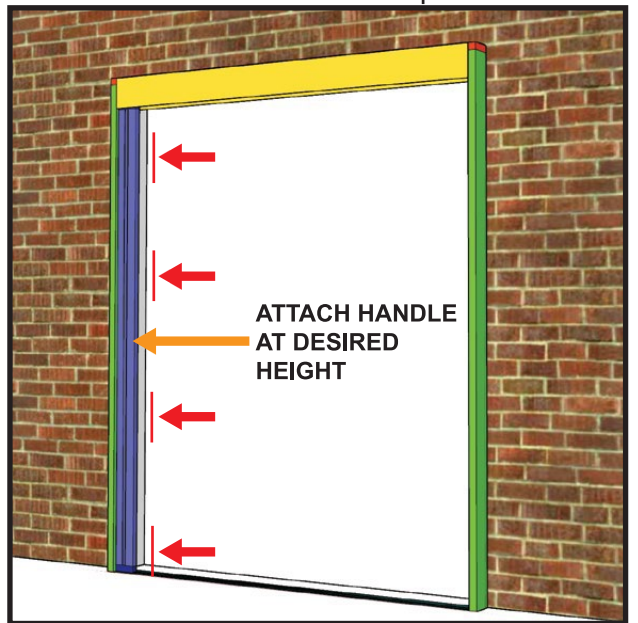


**STEP. 8.**  
Using firm, even pressure, push door onto  
connector clips until door “clicks” into place. Ensure  
all clips are engaged correctly. Attach handle

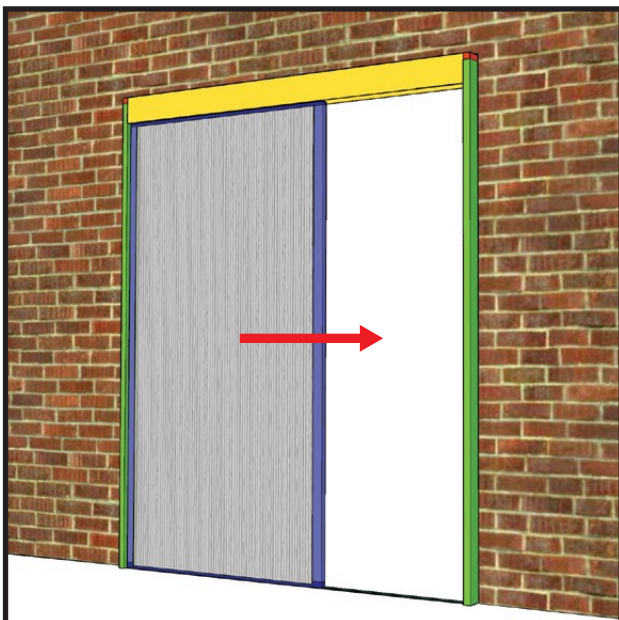

**STEP. 9.**  
Test door to ensure smooth operation. Door should  
connect to magnetic closure at opposite end

  
**Customer Service**  
 1300 155 355  
[info@pillarproducts.com.au](mailto:info@pillarproducts.com.au)  
[www.pillarproducts.com.au](http://www.pillarproducts.com.au)

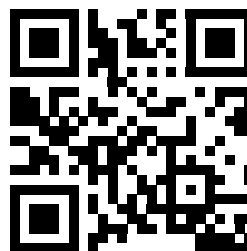

For more information  
and installation guides

**DOOR IS NOT DESIGNED TO BE CLOSED IN HIGH  
WINDS OR STRONG WEATHER**