

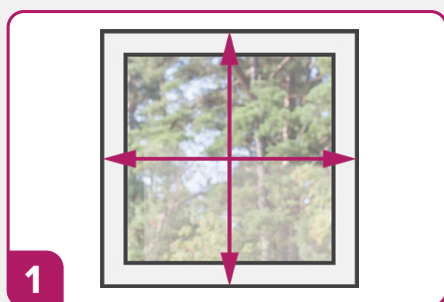


magnetic QUICKFIT FLYSCREEN KIT


Installation Instructions

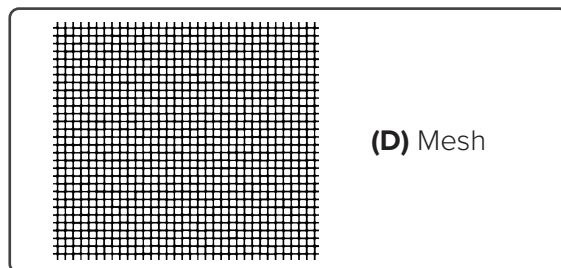

Components List

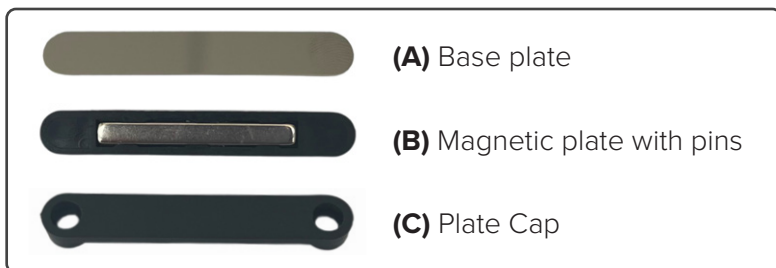


1 Measure dimensions of the window frame where the mesh is intended to be installed. Cut mesh (D) 10mm-20mm wider than measurement.

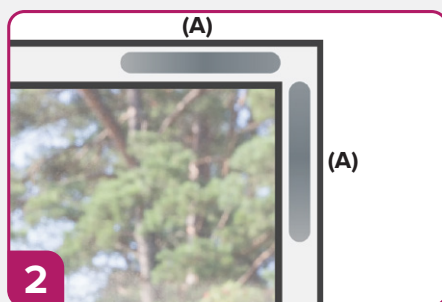


2 Peel the backing sticker off base plate (A) and adhere to each corner.

- 2 for each corner
- For larger windows, stick one additional base plate (A) in the middle of frame

Note: If blue protective film is on the base plate, please peel off.

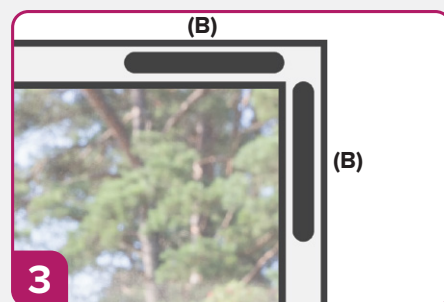


3 Place magnetic plate with pins (B) onto the base plate from step 2.

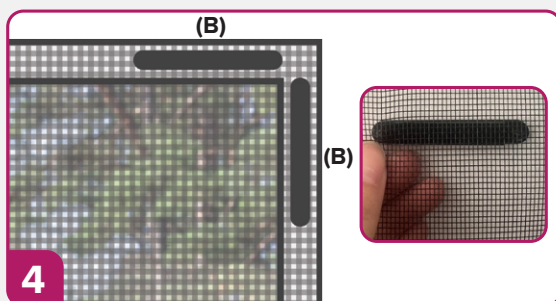


4 Starting from the top corner, hold the mesh (D) over the magnetic plate (B) and press into the pins. The pins should pierce through the net. Repeat for all corners.

Note: Ensure mesh is relatively taut with no creases.

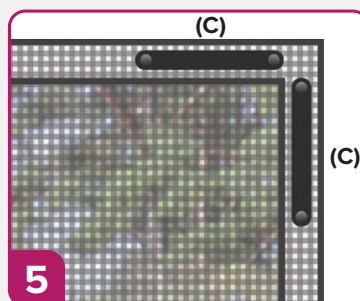

5 Firmly press the plate cap (C) onto the magnetic plate (B). You can re-tighten the mesh a little by moving the magnetic holders over the base plate.

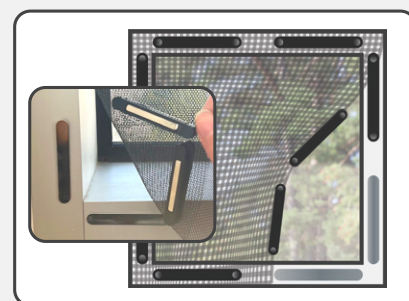

To remove or open
Simply lift the magnetic plate (B) and mesh (D) from the base plate (A).